

Liability Disclaimer

This device is a tool designed to assist the clinician in the administration of EMDR. The purchaser/clinician agrees to accept full responsibility for any harmful results and/or undesirable consequences obtained from the use of this product.

The manufacturer of this product shall not be held liable for adverse affects caused to clients resulting from the administration of EMDR or any other form of therapy using this product.

Any unexpected reactions, results, or behavior noted as a result of the administration of EMDR, either using this product or by other methods, should be immediately reported to the EMDR Institute.

Limited Warranty

The manufacturer warrants this equipment to the original purchaser against defective material or workmanship during the warranty period from the date of purchase. The manufacturer's responsibility under this warranty is limited to the repair or replacement of defective parts.

The warranty period:

90 days on components that connect with wires. This includes cables, wired pulsers, headphones and AC Adapters. One year on all other parts and components. The manufacturer reserves the right to determine whether the part or parts failed because of defective material, workmanship or other causes. Failure caused by accident, normal wear, alteration, misuse, tampering, negligence or improper packaging of returned units is not covered by this warranty. **This warranty is void when product is used by multiple therapists in a shared environment.** Please be advised that if a product is returned for warranty service and no defects are found or the problem is due to a weak/dead battery or operator error a shop charge and return shipping costs may be charged. All warranty repairs must be done by NeuroTek or a representative designated by NeuroTek. Any repair to the equipment other than by these authorized facilities voids this warranty. The rights under this warranty are limited to the original purchaser and may not be transferred to subsequent owners. **To receive warranty service, you must first contact NeuroTek for a return authorization number.** This number will be used for tracking your return. Send the complete unit, postage paid, to NeuroTek. Include a description of the problem you are having and a daytime phone number.

12100 W. 52nd Ave. #116
Wheat Ridge CO 80033
www.neurotekcorp.com

NeuroTekTM
Corporation

303 420-8680 Voice
303 422-9440 FAX
emdrtools@neurotekcorp.com

Deluxe Tac/AudioScanTM Operating Instructions

 


The EMDR Clinician's Assistant

***Please read all instructions
completely before operating.***

.....
**NeuroTek
Corporation**

Deluxe Tac/AudioScan Operating Instructions

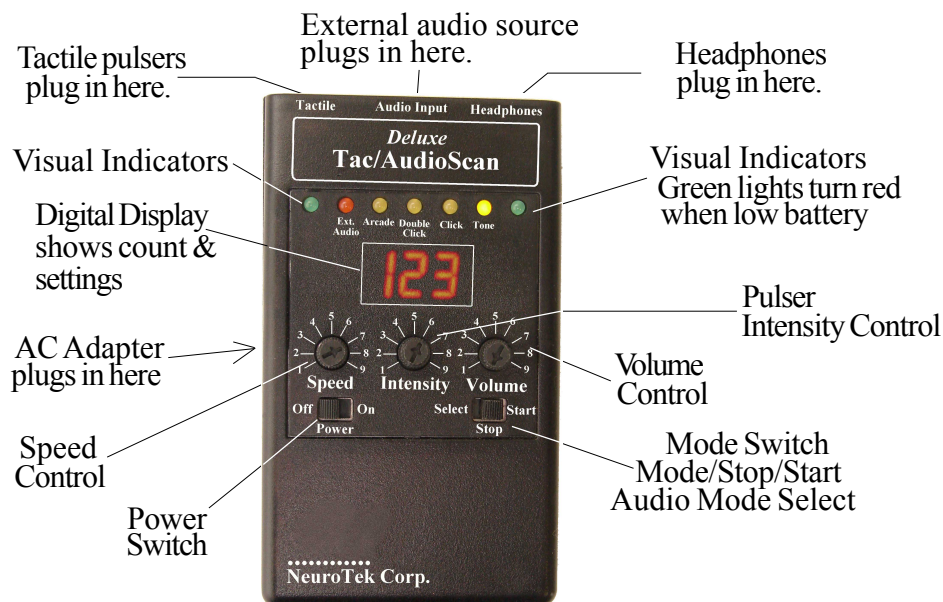

Deluxe Tac/AudioScan Controls

 
The DeluxeTac/AudioScan is very simple to operate. The only assembly required is plugging in the headphones and the tactile pulsers. Set the volume, speed and intensity controls to the desired levels and you are ready to go.

Audio Mode: To select one of 4 internally generated sounds or use an external audio source, move the mode switch to the select position. When the desired audio mode is illuminated on the visual indicators, move the switch back to the stop (middle) position to set the mode. If selecting the external audio mode, connect from the audio input jack on the Tac/AudioScan to the headphone jack of any external tape or CD player using the supplied interface cable. (See example) To start the alternating tones and tactile, move the mode switch to the start position. **To pause in between sets, stop the alternations by moving the mode switch back to the center (stop) position.** If the power switch is turned off, the audio mode will return to the default "tones" mode when turned back on.

Hold the gray pulser in your left hand and the black pulser in your right hand. The gray pulser pulses with the left light and tone, and the black pulser pulses with the right light and tone.

If the Tac/AudioScan doesn't work, verify that the battery is inserted correctly. Follow the label illustration inside the battery compartment for correct battery orientation.

Hint: When using an external audio source containing a speaking voice, turn the base adjustment on your audio source to the lowest minimum setting for best sound quality.

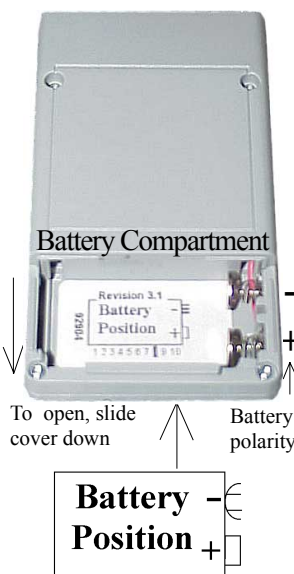

Low Battery indicator: When the battery gets low the 2 green visual indicators will turn red. The red lights indicate it is time to change the battery.

Digital Display: In normal operation mode the digital display is in counter mode and 3 dots are turned off. When paused the display holds last count. The counter will reset when the session is restarted. Selecting audio modes will turn on 3 dots on the display. The left digit displays Speed setting, middle digit displays Intensity setting and right digit displays Volume setting. Moving mode switch back to center locks in audio mode and continues to display adjustment settings. Moving mode switch back to run returns display to counter mode.

Intensity
1.2.3.
Speed Volume



Example of how to connect to external audio source: Using audio cable (supplied with plug on both ends), connect one end to headphone port on your music source and the other end to the Deluxe Tac/AudioScan's audio input port as shown.

*** Important Information - Please Read ***

* If your pulsers stop working or become intermittent *

If your pulsers stop working or become intermittent, **try a new, fresh battery or try using the AC adapter.** When the battery becomes weak, the tones and lights may continue to operate correctly while the pulsers may become weak or intermittent. This is normal when the battery is weak. If a new battery does not fix the problem, contact NeuroTek for instructions. **Please do not return any product without first calling us as this may delay any needed repairs.**

An important note about the cables

To extend the life of your product and reduce the possibility of product failure, we advise using care when handling the cables for this product. By following these suggestions you may significantly extend the product's life and reduce the need for repairs:

1. Do not wrap cables tightly around the product. Coil the wires and use a twist tie.
2. Do not pull or stretch the cables.
3. Do not step or walk on the wires that are lying on the floor.
4. If the lengths seem too long, coil the excess and wrap with a rubber band or twist tie to prevent from dragging on the floor.

By using care and common sense, you may prevent the need for future repairs.